

LIVE LOCK

SYNC Setup & Usage Guide

Quick setup instructions for accurate trolling motor synchronization.

1. Initial Setup

1. Deploy the trolling motor.
2. Manually align the trolling motor and the Live Lock transducer so they are pointing in the same direction.
3. Press and hold the **LOCK** button for **2 seconds** until **both LEDs flash**.

What this does: This stores the alignment reference between the trolling motor and the Live Lock unit.

Activate SYNC

Press the **LOCK** button **twice**. The **LOCK LED flashes** while SYNC is active.

Cancel SYNC

Press **LEFT** or **RIGHT** to cancel SYNC and return to manual control.

Reactivate SYNC

Press the **LOCK** button **twice again** whenever you want to re-enable SYNC.

2. Important Notes

- The trolling motor and Live Lock alignment must be completed after **every power cycle**.
- Make sure the Live Lock can rotate its full **350 degrees** without obstruction.
- The transducer must **clear the shaft and surrounding hardware** to avoid binding or damage.

Tip: Recheck the physical alignment before activating SYNC if the trolling motor or transducer position was moved while powered off.